


How to fit? Uno Wood Blinds

You will need:

- A drill with correct bit
- A crossheaded screwdriver
- A metal tape measure
- A pencil

You should have:

2+ brackets

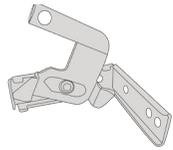


x2 Safety cleats



Screws and raw plugs as required



 Valance clips as required (attached to headrail)



Your brackets are packed separately in the box. Please ensure you've located them before disposing of the packaging.


The brackets are a universal type that can be used to top fix the blind into a recess or face fix into a frame or a wall.

Please read the following instructions carefully before you start fitting your blind.


1. Fix the brackets

- Our mounting brackets can be face fixed or top fixed, depending on your requirements.
- Ensure the brackets are positioned a suitable distance away from any window handles or obstructions to allow the blind to operate smoothly
- Measure approx 5cm in from each end, hold each bracket in place and mark where the screws will go using the relevant holes in the bracket as a guide.
- Depending on the width of your blind you may be supplied with additional mounting brackets, space these equally along the width of the blind.
- If you're fitting to a wall or lintel, use a drill with a suitable size and type of bit to make the holes and push in the wall plugs.
- If you're fitting into a wooden frame, screw your brackets into position. You may want to make pilot holes to allow easier fixing of the screws.

Top-fix

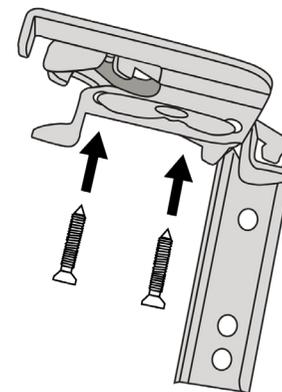

Face-fix

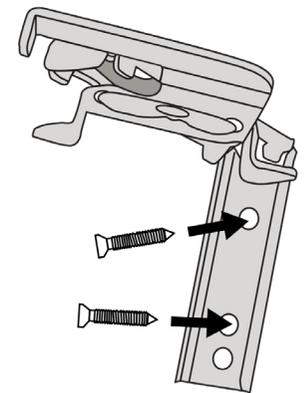

2. Fix the blinds

- Hook the back edge of the headrail onto the groove on the bracket (see image 1). Then twist the mechanism on the bracket clockwise so that the claw shaped hook towards the front edge of the headrail and click into position (refer to images 2 and 3).

Image 1



Image 2



Image 3



Operating your blind:

- To adjust the angle of the louvres, twist the wand and the louvres will turn through 180 degrees.
- To open and close the blind, pull the wand ensuring the louvres are in the open position.
- From time to time your louvres may be knocked out of alignment. To re-align the louvres remove them from the headrail and draw into the open position. Using the wand rotate the hooks (that hold the louvres onto the headrail) until they are aligned. You will feel some resistance and you may hear a clicking noise, this is normal and you should continue to operate the wand until the hooks are fully aligned.


3. Fix the valance

- Clip the valance clips on to the front edge of the headrail as shown in image 4.
- With a downward motion click the valance clip into place as shown in image 5.

Image 4



Image 5

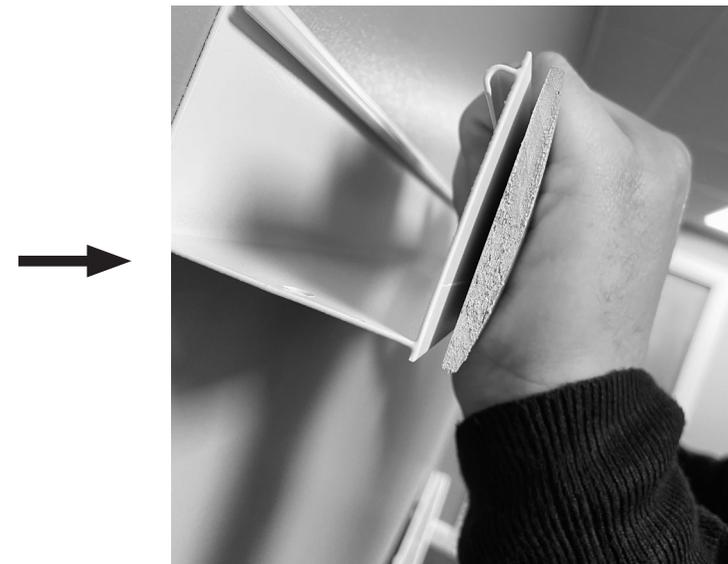

4. Fitting the safety cleat

- Blinds that require a safety cleat must not be installed less than 1.5m from the floor. Safety cleats are designed to keep cords taut and out of reach of children – always wrap the cord around the cleat.
- Fix the safety cleat to the wall with 2 screws in a position that's out of reach of children. Install it as close to the head rail as possible, ensuring that it is no closer to the floor than 1.5m.
- If more than one cleat is required for the complete amount of cord to be wrapped around, ensure that they are positioned no further apart than 20cm and both are no closer to the floor than 1.5m.



5. Re-assemble the cord consolidator

- **Note - the consolidator is designed to come apart to remove a hazardous loop.**
- To reconnect the consolidator, check that it is not damaged, then re-insert the free cords as described below. If any slack cording appears above the consolidator, lower the blind so that it is straight and raise it again.
- Gather the loose cords together and align the knots.
- Insert the knotted ends into the groove at the top of the consolidator, ensure that the knots are secured below the central panel.
- Secure the two halves together.

Image 6



Image 7



Image 8



Safety tips:

There are things that you can do to reduce risk in your home.

- Move beds, cots and furniture away from the window.
- Do not let cords or chains hang loose. Make sure they are kept out of reach of children at all times. Do not tie loose cords and chains together.
- Check the condition of all safety devices if not used regularly and replace if the device is faulty.

Warning

Blinds can be potentially dangerous to small children. Please be aware that swallowing small parts can cause internal asphyxiation. Looped or low hanging cords, chains or tapes can create hazardous loops which could lead to the risk of strangulation. We do everything we can to ensure your chosen product is child safe. As a minimum all of our blinds meet the European Standard BS EN 13120 for safety. Our instructions and the supplied Child Safety device(s) are intended for you to ensure that your blind is as safe as possible.

The information below gives guidance for fitting the provided child safety devices. All safety devices must be correctly installed for the protection from strangulation of young children and the proper use of the blind. Please read the instructions carefully and keep safe for future reference.

Only use the devices and cords provided with your blind. Videos showing how to fit and reconnect child safety devices are available, along with replacements at: www.makeitchildsafe.co.uk.



Got a question that we haven't already answered?
Get in touch with us by sending an email to sales@weloveblinds.com
or call us on **0800 009 2959** and we'll be happy to help!

